



SMART WIFI TOWER FAN

Thank you for purchasing this TCP Smart Wi-Fi Hot & Cool Tower Fan.

The TCP Smart WiFi Tower Fan offers an efficient and quick heating solution which is portable and easy to use. Control your heating exactly as you desire either using the control panel situated on the heater or mobile phone using the TCP Smart App and /or voice control via Alexa or Google Nest.

MODEL	POWER
SMAWHTOW2000WBHN2116	AC220-240V 50-60Hz 2000W Class II

USER INSTRUCTIONS

IMPORTANT: Read these instructions fully before using the heater. Retain these instructions for future reference.

 
SAFETY INSTRUCTIONS (to be read before operating the heater)

- 1 Before using set the power-level switch which is located at the back of the heater to "0".
- 2 **CAUTION:** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present. Children 3 years and younger should be continually supervised when in close proximity to the heater. Children aged 3 to 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged 3 to 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- 3 Use this heater on a flat or horizontal and stable surface.
- 4 Keep the power cord away from the hot body of the heater.
- 5 Indoor use only.
- 6 Do not place the heater on carpets with a very deep pile.
- 7 Do not place the heater close to curtains or furniture in order to avoid a fire hazard.
- 8 Do not insert any object through the air grilles of the heater.
- 9 Do not use the heater in areas where flammable liquids are stored or where flammable fumes may be present.
- 10 Always unplug the heater when moving it from one location to another.
- 11 Do not use this heater if it has been dropped;
- 12 Do not use if there are visible signs of damage to the heater;
- 13 Do not leave the heater switched on when your property is vacant.

WARNINGS


- In order to avoid overheating, do not cover the heater.
- Always use the heater in an upright position.
- Do not use the heater to dry your laundry.
- Never obstruct the intake and outlet grilles to avoid the danger of overheating.
- Do not place it up against walls, furniture, curtains, etc.
- If the supply cord is damaged, it must be replaced by the manufacturer, their service agent or a similarly qualified person in order to avoid a hazard.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

Assembly

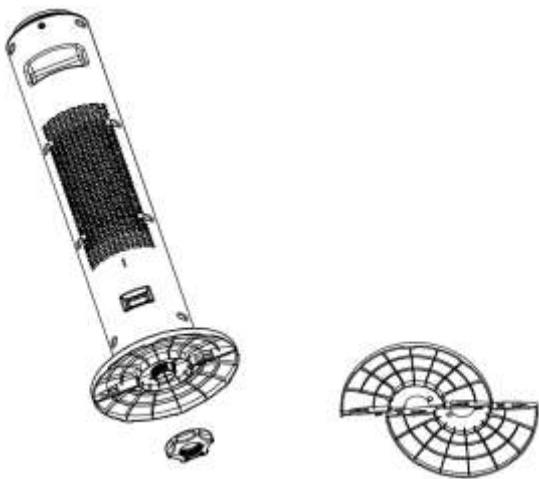


To fit the base to the body of the heater. Align the 4 clips on both sides of the base. Push together until both sides sit flush. Place on the bottom of the heater and secure using the plastic bolt provided.

 Parts and components:

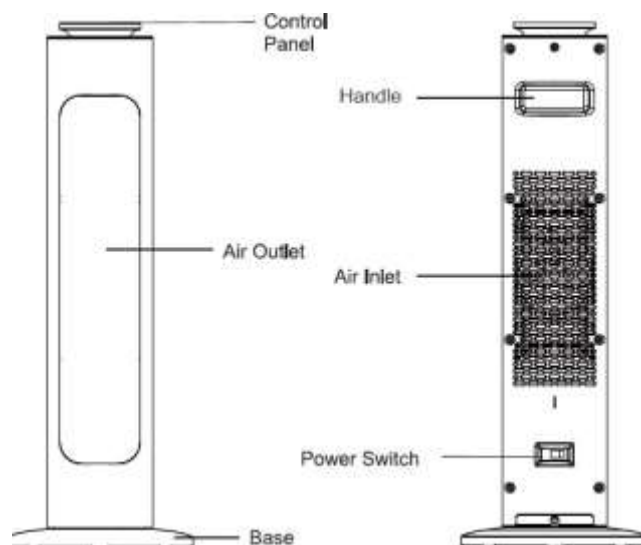

Control Panel

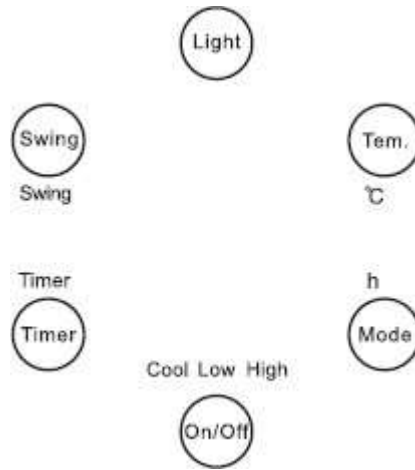 

OPERATING THE HEATER

Note : It is normal when the heaters are turned on for the first time, or when they are turned on after a long period of time not being used, the heaters may emit some smell and fumes. This will disappear when the heater has been on for a short while.

Choose a suitable location for the heater, taking into account the safety instructions above. Insert the plug of the heater into a suitable socket.



On/Off

Press once to turn the device on.

This feature can be performed using the TCP Smart App



Mode

Press to cycle through the three available mode: Cool, Low Heat and High Heat.



Oscillation

Press the swing button to activate or deactivate the oscillation function. When it is activated, the oscillation light indicator will turn on and air flow will be moved from left to right.

This feature can be performed using the TCP Smart App

Timer button

Press the timer button repeatedly to increase the operating time by 1-hour intervals. The time can be set from 1 to 12 hours. The display will show the remaining operating time. When the display is showing the timer duration the **h** symbol will be displayed next to the timer. To cancel the timer, press the timer button repeatedly until the 00 is displayed.

This feature can be performed using the TCP Smart App

Temperature button



Press the temperature button repeatedly to increase the target room temperature, from 15 to 40°C. Once the temperature is set, the digits will flash for 3 seconds and then the display will show the current room temperature. Once the target temperature is reached, the device will automatically switch to fan mode.

The device features a safety push button on its base, which will turn the device off if it is accidentally tilted.

This feature can be performed using the TCP Smart App

Colour Button



Press to cycle through the options for the ambient light – Off, Blue, Red or Purple. The light can be operated independently of the Fan.

This feature can be performed using the TCP Smart App

CLEANING THE HEATER

Always un-plug the heater from the wall socket and allow it to cool down before cleaning. Clean the outside of the heater by wiping with a slightly damp cloth and buff with a dry cloth. Do not use any detergents or abrasives and do not allow any water to enter the heater.

STORING THE HEATER

When the heater is not used for long period of time it should be protected from dust and stored in a clean dry place.

CORRECT DISPOSAL OF THIS PRODUCT



WARRANTY INFORMATION

The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 2 years, starting from the date on which the appliance is sold to the end user.

The warranty only covers defects in material or workmanship. The repairs under warranty may only be carried out by an authorized service centre. When making a claim under the warranty, the original purchase receipt (with purchase date) must be submitted.

The warranty will not apply in cases of:

- Normal wear and tear
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
- Use of force, damage caused by external influences
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliances

CERTIFICATION CONFORMITY

Hereby, Technical Consumer Products Ltd declares that the radio equipment type TCP Smart Wifi Tower Fan 2000W – White is in accordance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address – <https://tcpsmart.eu/compliance-data>

REGISTERED OFFICES

TCP UK Ltd, 1 Exchange Court, Cottingham Road, Corby, Northants, NN17 1EW.

TCP France, Quai Gabriel P'ri, 1, Joinville Le Point, France, 94340.

CONNECTING THE APPLIANCE TO WIFI

Use the QR code below to download the TCP Smart App for control of the heater remotely.



To control the heater using the TCP Smart App the unit must be turned on. Before you get started you will need the following:

- Smart device such as a mobile phone or tablet
- Access to the Google or Apple app store, log on and passwords
- The name of your Wi-Fi network and password to your Wi-Fi network
- Confirm your home Wi-Fi router is running on 2.4Ghz and not 5Ghz. If you are unsure, please consult your broadband provider for details on how to change the settings.
- Turn off any Wi-Fi extenders during set up
- Check you do not have any limitations on the number of devices with your broadband provider

Please note: Our products do not work on 5Ghz only 2.4Ghz.

For instructions on how to connect to Amazon Alexa or Google Nest please visit <https://www.tcpsmart.eu/how-to-alexa-google-nest>

With the heater turned on, hold down the On/Off button until it beeps and the LED light above the button blinks quickly, the device is now in pairing mode. In the TCP Smart App, enter your WiFi password and follow the instructions in the App to connect.

USING THE APPLIANCE WHEN CONNECTED TO WIFI

Note: screen appearance may vary



DEVICE CONTROL SCREENS

- 1 **Switch** – Power on and off
- 2 **Mode** – to select Cool, Low Heat or High Heat
- 3 **Timer** – to select time countdown duration
- 4 **Settings** – to select oscillation or schedule



SWITCH

ON/OFF

Press **Switch** to turn heater on and off remotely

Set **Target Temperature** by using + or - buttons



MODES

Press Mode for options, one mode can be selected at any one time. Press selected mode once to activate.

COOL

Press **Mode**. Press Cool to activate the cool mode.

Set **Target Temperature** by using + or - buttons



LOW HEAT

Press **Mode**. Press Low Heat to activate.

Set **Target Temperature** by using + or - buttons



HIGH HEAT

Press **Mode**. Press High Heat to activate.

 
Set **Target Temperature** by using + or - buttons



TIMER


Using the Timer function, the heater can be set to turn off after a specified amount of time. Choose **Timer** at the bottom of the main screen, select the duration of time that you want the heating to stay on for. The heater will turn off after the selected amount of time has passed.

Use the cancel button to stop the countdown.

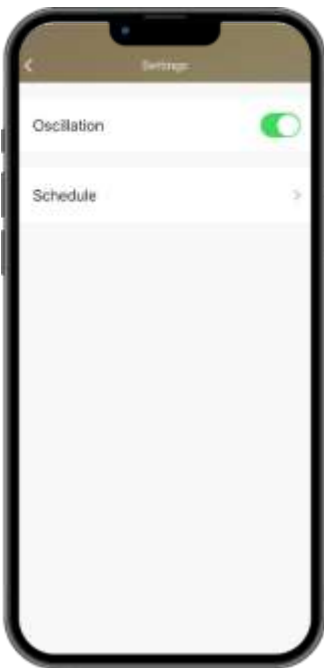


OSCILLATION

 Press Settings on the main screen. Slide oscillation button to right to activate. Slide left to deactivate.

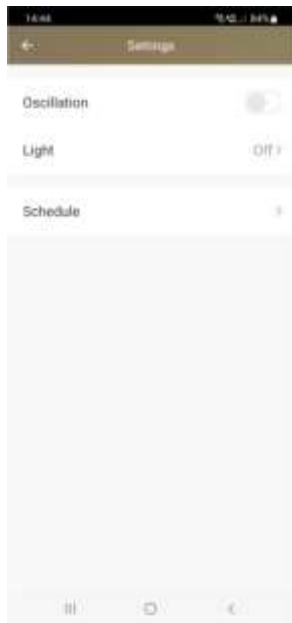

TOWER FAN LIGHT

 Press Settings on the main screen. Press light to ON. Press required colour to turn on the light on the top of the fan. To turn off choose the OFF button.

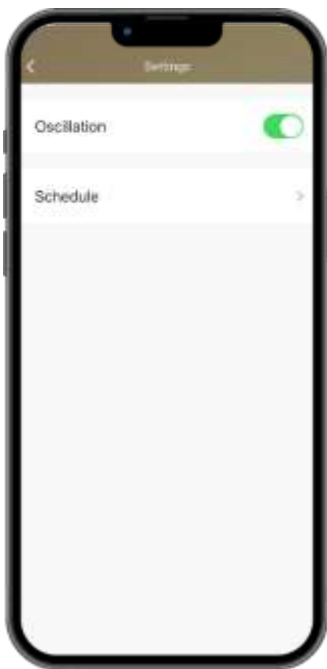

SETTINGS

SCHEDULE

In settings operate the schedule by pressing the Schedule > button.

Press Add button.



To add just one occurrence select the time you want to start the heater, press Switch and select on. Press Done followed by Save

Select the time you want the heater to turn off, press Switch and select off. Press Done followedby Save



WEEKLY SCHEDULE

To turn the heater on for specific day(s) and time(s).

Press repeat to show days of the week.
Tick the day(s) of the week you want the heater to turn on.

Press < button on top left hand of the screen.

To receive a notification to your phone to alert when the schedule has activated, before saving press notification.



Select the time you want the heater to start.
Press Switch.

Press ON followed by Done. Press Save



To turn the heater off, press repeat to show days of the week.

Tick the same day(s) of the week you want the heater to turn on.

Press < button on top left hand of the screen.

Select the time you want the heater to turn off.



Press Switch followed by Off.

Press Done followed by Save.



This screen will list the times and dates you have selected to turn the heater on and off. Press <