



## GLASS PANEL HEATERS

The TCP Smart Wi-Fi glass panel heaters offer an efficient and quick heating solution combined with a sleek, modern look. Control your heating exactly as you desire either using control panel situated on the heater or remotely using the TCP Smart App.

## USER INSTRUCTIONS

### IP24 ELECTRONIC SERIES

#### MODEL

#### POWER

SMARADGBL1500UK/  
SMARADGWH1500UK

AC220-240V 50-60Hz 1300-1500W Class I

SMARADGBL2000UK/  
SMARADGWH2000UK

AC220-240V 50-60Hz 1800-2000W Class I

**IMPORTANT:** Read these instructions fully before using the heater. Retain these instructions for future reference.

## SAFETY INSTRUCTIONS (to be read before operating the heater).

1. Ensure the feet are correctly attached before using the heater.
2. **CAUTION:** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present. Children 3 years and younger should be continually supervised when in close proximity to the heater. Children aged from 3 years to less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
3. Use this heater on a flat, horizontal and stable surface, or fix it to the wall, as applicable.
4. Ensure the power supply to the socket into which the heater is plugged is in accordance with the rating label on the heater and that the socket is earthed.
5. Keep the power cord away from the hot body of the heater.
6. Indoor use only.
7. Do not place the heater on carpets with a very deep pile.
8. Always ensure that the heater is placed on a firm level surface.
9. Do not place the heater close to curtains or furniture in order to avoid a fire hazard.
10. Do not insert any object through the heat outlet or air grilles of the heater.
11. Do not use the heater in areas where flammable liquids are stored or where flammable

fumes may be present.

12. Always unplug the heater when moving it from one location to another.
13. Do not use this heater if it has been dropped.
14. Do not use if there are visible signs of damage to the heater;
15. **CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be operated through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

## WARNINGS

- In order to avoid overheating, do not cover the heater.
- Always use the heater in an upright position.
- Do not use the heater to dry your laundry. Never obstruct the intake and outlet grilles to avoid the danger of overheating.
- The heater must be positioned at least 100 cm from furniture or other objects.
- Do not place it up against walls, furniture, curtains, etc.
- This appliance comes with a Y-type connection. Replacement of the cable must be undertaken by a technician authorized by the manufacturer, because such work requires special tools.
- If the supply cord is damaged, it must be replaced by the manufacturer, their service agent or a similarly qualified person in order to avoid a hazard.
- In order to avoid overheating, do not cover the heater.
- Do not locate the heater immediately below a socket-outlet.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

## CERTIFICATION CONFORMITY

- Hereby, Technical Consumer Products Ltd declares that the radio equipment type TCP Smart Wifi Fan 1500W – White, TCP Smart Wifi Fan 1500W – Black, is in accordance with Directive 2014/53/EU.
- The full text of the EU declaration of conformity is available at the following internet address – <https://tcpi.eu/compliance-data/>
- 

## REGISTERED OFFICES

 
- TCP UK Ltd, 1 Exchange Court, Cottingham Road, Corby, Northants, NN17 1TY.
- TCP France, Quai Gabriel P'ri, 1, Joinville Le Point, France, 94340.

# ASSEMBLY OF THE HEATER

## FREE STANDING

Before using the heater, the feet (supplied separately in the carton), must be fitted to the unit. These are to be attached to the base of the heater using the 4 self-tapping screws provided, taking care to ensure that they are located correctly in the bottom ends of the heater side mouldings.

- 1 Turn the heater upside down.
- 2 Put the feet into position and align the screws with the holes on the underside of the feet.

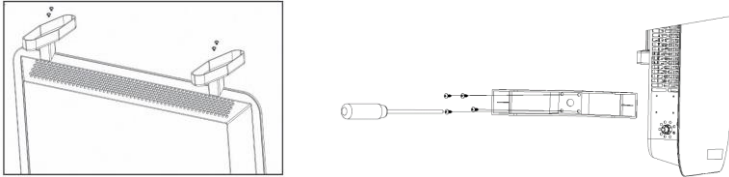


3. Insert the screws into the feet and fully tighten.
- 4 After the installation is complete turn the heater the correct way up

## WALL MOUNTING

 
Caution: there should be a distance of at least 40cm between the lower part of the appliance and the floor. The feet must be removed before mounting the appliance on the wall.

**IMPORTANT:** Before drilling, ensure that no wires or pipes are behind the wall to prevent damage.


1. Measure the distance between the two slots situated at the back of appliance for "A" and "B" (see picture 1)
2. Remove the bracket from the product as shown in Figure 3.
3. Drill four holes at the same distance in the wall and insert a plug in each hole you just drilled. Place the brackets facing the holes as indicated on picture 2;
4. Install the bracket on the wall as shown in Figure 2 and attach them in this position with the screw supplied.
5. Attach the appliance on the wall. To do so, hold it in such way that the slots are facing the brackets; insert the appliance halfway onto the brackets until the appliance can go down into the grooves of the brackets.
6. Then install the appliance by proceeding the other way around compared to point 2 above.
7. Attach the appliance back on the wall as indicated in point 4. Use tools to rotate the safety buckle into the hole on the back of the product;

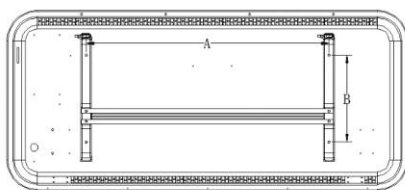

picture 1

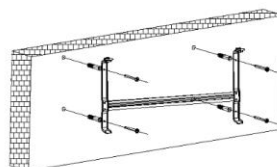 

picture 2

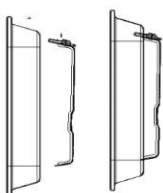 

picture 3




picture 4

# OPERATING THE HEATER

 Note, it is normal when the heaters are turned on for the first time, or when they are turned on after a long period of time not being used, the heaters may emit some smell and fumes. This will disappear when the heater has been on for a short while.

Choose a suitable location for the heater, taking into account the safety instructions above. Insert the plug of the heater into a suitable socket.


## CONTROL PANEL LAYOUT

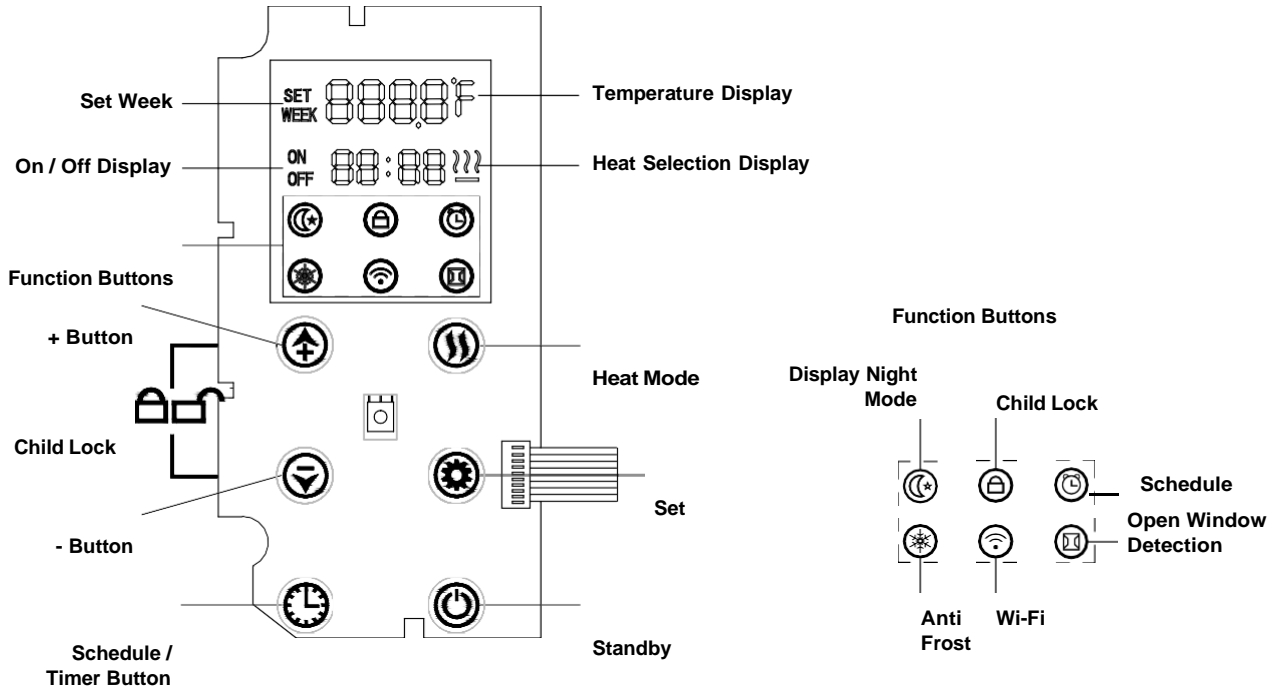

## STANDBY ON/OFF

Before using the panel controls or Smart App please ensure the heater is switched on using the On/Off switch (see figure 1 below). The glass panel heater is now ready for use.

 - 1 Press the STANDBY button to turn the heater on (figure 1). The display panel will light up and the unit will start to operate with the default settings.
- 2 When using for the first time, set the current day and time (see below instructions).
- 3 Use the UP and DOWN button to change the desired temperature, and the MODE button to change the High Heat and Low Heat modes (see figure 2)

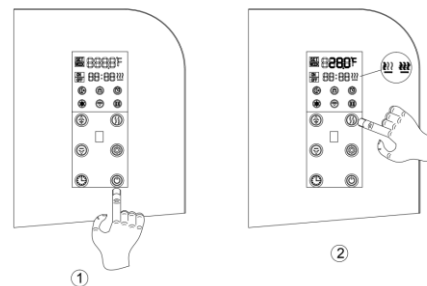

## SETTING THE DAY AND TIME

- 1 With the appliance turned on, hold the SET button for 3 seconds until the SET/WEEK is highlighted. The SET/WEEK value will start to flash. (week 1 -7 indicative of days of the week)
- 2 Change the week value using the UP and DOWN buttons.
- 3 Hold the SET button to confirm the week value, the hour and minute values starts to flash.
- 4 Change the hour value using the UP and DOWN buttons.
- 5 Hold the SET button to confirm the hour value.
- 6 Change the minute value using the UP and DOWN buttons.
- 7 Hold the MODE button to confirm the minute value.
- 8 Or leave the unit for 5 seconds and the day and time will be saved.

The above operation can be performed using the TCP Smart App.

# HOW TO OPERATE

## TURNING ON AND OFF

The STANDBY button can be pressed to enter and exit standby mode. If the unit is not to be used for a while, we would advise switching off and unplugging the heater.

 
## CHANGING THE ROOM THERMOSTAT

The room temperature can be adjusted in both High Heat and Low Heat modes, using the UP and DOWN buttons. After the UP or DOWN button has been pressed, the display will show the target temperature. The target temperature can be adjusted between 10°C and 40°C.

Please note: The initial temperature shown on the display is the current surrounding temperature. When setting the temperature you desire (target temperature) press the UP and DOWN buttons until you reach your target temperature, then stop. The display will then flash 4 times and show the surrounding room temperature.

Example 1 If the target temperature is 27°C, and the surround temperature is hotter at 30°C then the device will not heat as 27°C is lower than 30°C.

Example 2 If the target temperature is 27°C, and the surround temperature is cooler at 20°C then the device will heat until 27°C is reached.

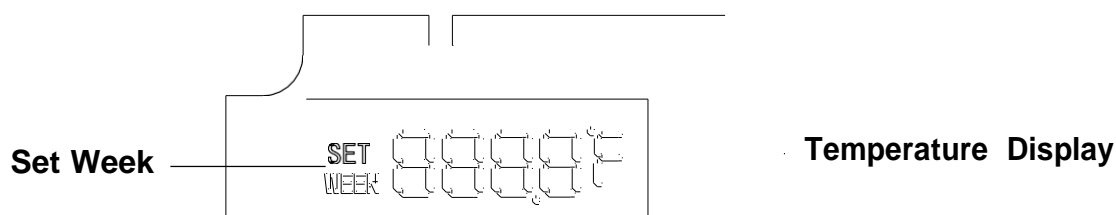


This feature can be performed using the TCP Smart App

### CHILD LOCK

 To activate: Press the SET button until the Child Lock symbol (shown above) is highlighted green. Press MODE button or leave for 10 seconds and the operation will be saved.

To deactivate: Press the SET button until the Child Lock symbol is highlighted. Press DOWN button. Press MODE button or leave for 10 seconds and the operation will be saved.

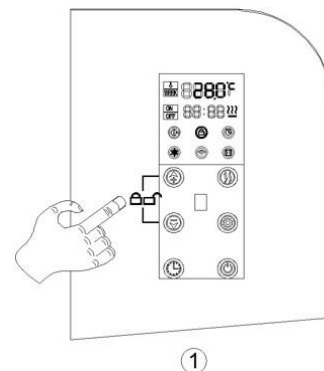

This feature can be performed using the TCP Smart App

### CHANGING THE POWER MODE

Repeatedly press the MODE button to change between the 2 available power modes:

High Heat	The heater will operate at higher power to reach the desired temperature quicker. The temperature can be specified between 10°C and 40°C
Low Heat	The heater will operate at lower power to reach the desired temperature quicker. The temperature can be specified between 10°C and 40°C

**Please note:** This feature is only available if the target temperature, is above the surrounding temperature.

### ANTI-FROST MODE

Anti-Frost	The heater will operate to keep the room temperature between 5°C and 9°C in order to prevent freezing within the room. The desired temperature cannot be changed.
------------	---

To activate: Press the SET button until the Anti Frost symbol (shown above) is highlighted green. Press UP button. Press the UP. Press the MODE button or leave for 10 seconds and the operation will be saved.

To deactivate: Press the SET button until the Anti Frost symbol is highlighted again. Press DOWN button. Press the MODE button or leave for 10 seconds and the operation will be saved.

This feature can be performed using the TCP Smart App.

## **OPEN WINDOW DETECTION**

This feature detects when the ambient temperature drops by 5°C within 10 minutes, the heater will register the possibility of an open window in the room. If this happens, it will stop heating and enter standby mode.

To activate: Press the SET button until the Open Window Detection symbol is highlighted. Press UP button. Press the MODE button or leave for 10 seconds and the operation will be saved.

To deactivate: Press the SET button until the Open Window Detection symbol is highlighted. Press DOWN button. Press the MODE button or leave for 10 seconds and the operation will be saved.

This feature can be performed using the TCP Smart App.

## **STANDBY TIMER**

With the unit running with the desired settings, press the TIMER button. The timer symbol will illuminate and the display will flash 00:00. Repeatedly press the + or - buttons to increase or reduce the duration of the time (up to a maximum of 24 hours). Once the chosen timer length is selected, press the mode button or leave the heater, and after 10 seconds the timer will start. After the chosen time period the heater will enter standby mode.

This feature can be performed using the TCP Smart App.

## **SCHEDULE**

When you activate the schedule, you can start to set the weekly schedule according to following steps.

Press the SET button to highlight SET WEEK. The number "1" will begin to flash on the display to show that the first day is selected. Use the UP and DOWN buttons to select the weekday to edit.

Press the SET button once again to set the time of hours. The number "00" will flash and the ON/OFF light is highlighted. Press the UP and DOWN buttons to select the hours to change. On is turn on, OFF is turn off.

Press the SET button again to set the time for minutes, the number "00" will flash and the ON/OFF is highlighted. Use the UP and DOWN buttons to select the minutes. ON is turn on and OFF is turn off. Once the hours and minutes have been selected for the ON time, press the SET button to go through the process again for the OFF time. Once this is done press SET and the timings are saved.

The above steps can then be repeated to set other time periods throughout the week.

Press the MODE button or leave for 10 seconds and all of the timings will be saved.

This scheduling can only be used for one time period per day. More enhanced timings can be saved using the TCP Smart App.

To change any timings please follow the above.

## **DISPLAY NIGHT MODE**

To activate: Press the SET button until the Night Mode symbol (shown above) is highlighted. Press UP button. Press the MODE button or leave for 10 seconds and the operation will be saved.

To deactivate: Press the SET button until the Night Mode symbol is highlighted. Press DOWN button. Press the MODE button or leave for 10 seconds and the operation will be saved.

The panel light is reduced to 50% when using this mode. This feature is not available using the App.

## **CLEANING THE HEATER**

Always un-plug the heater from the wall socket and allow it to cool down before cleaning. Clean the outside of the heater by wiping with a damp cloth and buff with a dry cloth. Do not use any detergents or abrasives and do not allow any water to enter the heater.

## **STORING THE HEATER**

When the heater is not used for long period of time it should be protected from dust and stored in a clean dry place.

## **CORRECT DISPOSAL OF THIS PRODUCT**

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

## **WARRANTY INFORMATION**

The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 2 year, starting from the date on which the appliance is sold to the end user.

The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service centre. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted. The warranty will not apply in cases of:

- Normal wear and tear
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
- Use of force, damage caused by external influences
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliances



# CONNECTING THE APPLIANCE TO WI-FI

Use the QR code below to download the TCP Smart App for control of the heater remotely.



QR code for both android and iOS

To control the heater using the TCP Smart App the unit must be turned on.

The heater only has 1 set up mode: Quick Connection. The quick connection is a quick and simple way to set up the heater.

Before you get started you will need the following:

- Smart device such as a mobile phone
- Access to the Google or Apple app store, log on and passwords
- The name of your Wi-Fi network and password to your Wi-Fi network
- Confirm your home Wi-Fi router is running on 2.4Ghz and not 5Ghz. If you are unsure, please consult your broadband provider for details on how to change the settings.
- Turn off any Wi-Fi extenders during set up
- Check you do not have any limitations on the number of devices with your broadband provider

Please note: Our products do not work on 5Ghz only 2.4Ghz.

**For instructions on how to connect to Amazon Alexa or Google Nest please visit <https://www.tcpsmart.eu/how-to-alexa-google-nest>**

When turning on for the first time, press the STANDY button. The Wi-Fi at this stage will be turned off. To activate the Wi-Fi press the SET button until the Wi-Fi symbol (shown above) is highlighted green. Press the UP button to activate, the Wi-Fi symbol flashes quickly to indicate the unit is in quick connection mode. In quick connection mode follow the steps as indicated in the TCP Smart App.

To turn off the Wi-Fi setting press the SET button until the Wi-Fi symbol is highlighted green. Press DOWN button to deactivate.

# USING THE APPLIANCE WITH WIFI

## DEVICE CONTROL SCREENS

 
1. **Switch** - (power On or Off)
2. **Mode** - to select Anti-Frost, High Heat or Low Heat
3. **Timer** - to select time countdown function
4. **Settings** - to select Child Lock, Open Window Detection or Schedule



## MODES


### ANTI FROST


Press **Mode** for options, only one mode can be selected at any one time. Press Anti-Frost Mode once to activate.

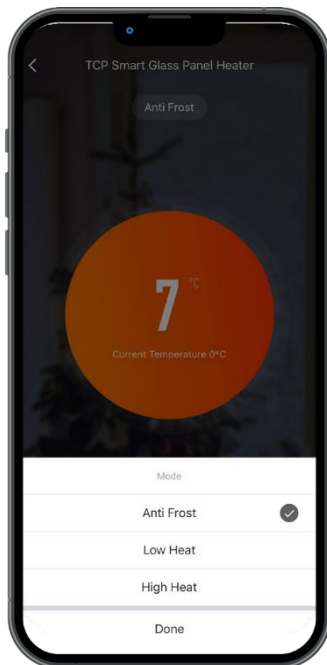

### LOW HEAT

  Press **Mode**. Press Low Heat Mode to activate. Set **Target Temperature** by using + or - buttons.

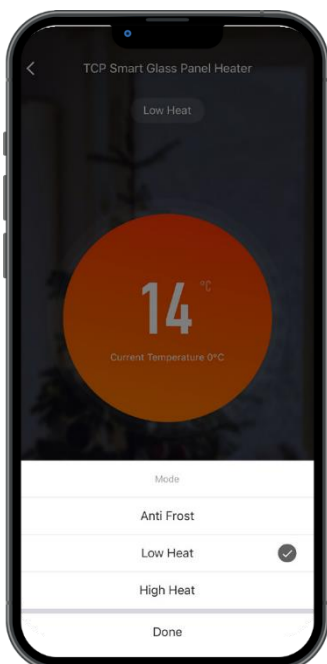


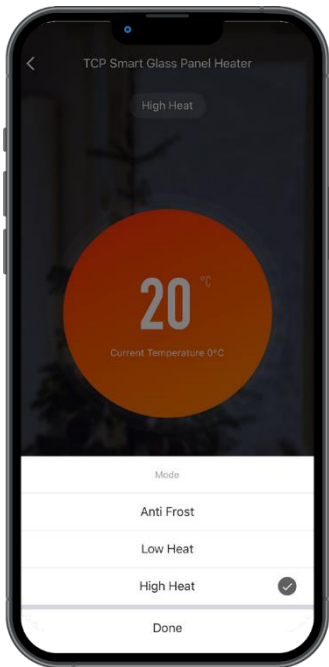

## HIGH HEAT



Press **Mode**. Press High Heat Mode once to activate.

 Set **Target Temperature** by using + or - buttons.

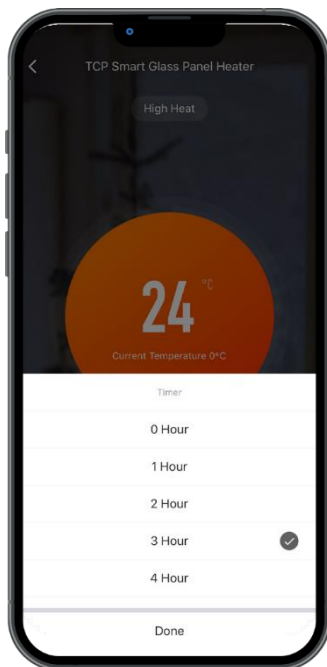

## TIMER

  Using the Timer function, the heater can be set to turn off after a specified amount of time. Choose **Timer** at the bottom of the screen, select the duration of time that you want the heating to stay on for. The heater will turn off after the selected amount of time has passed.

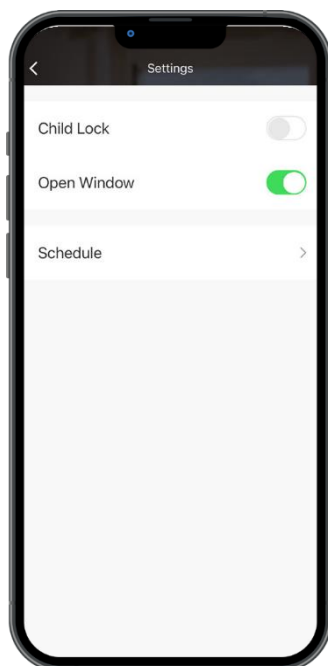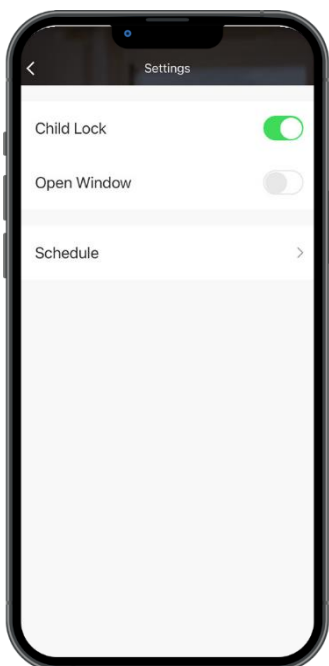



## SETTINGS

### CHILD LOCK

Press Settings. Slide Child Lock button to the right to activate. Slide to the left to turn off.

### OPEN WINDOW

 
 
Press Settings. Slide Open Window detection button to the right to activate. Slide to the left to turn off.

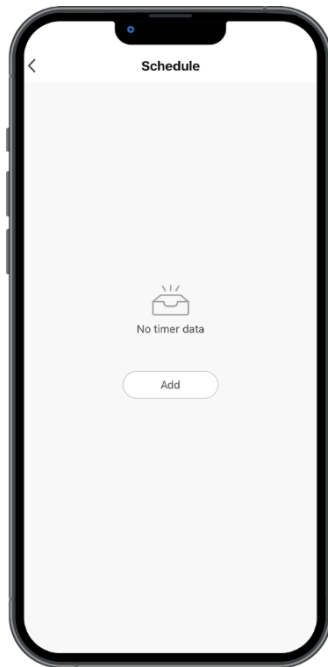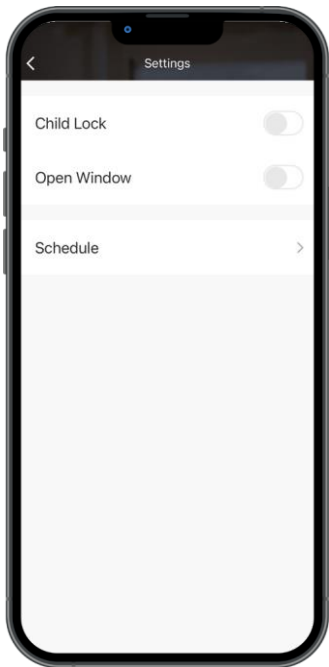

## SCHEDULE



In settings operate the schedule by pressing the Schedule > button.

  Press Add button to show timings and days of the week.

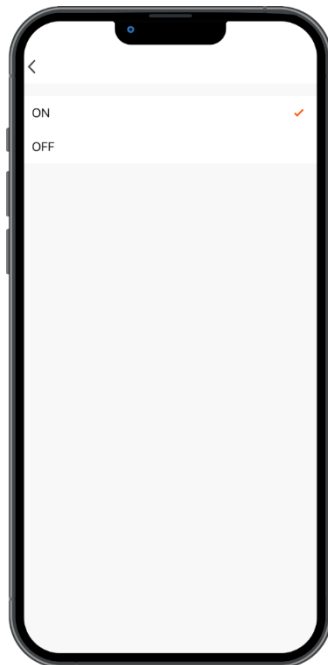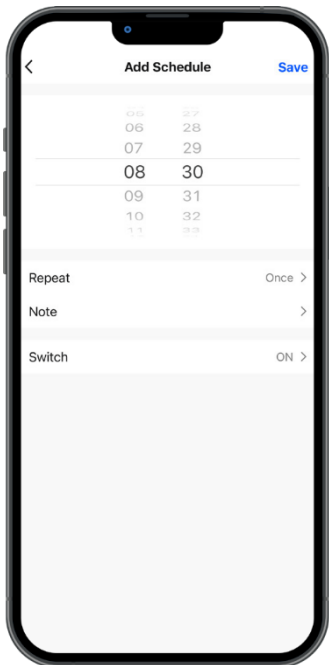

To add just one occurrence select the time you want to start the heater, press Switch and select on. Press Done followed by Save.

 
 
Select the time you want the heater to turn off, press Switch and select off. Press Done followed by Save.

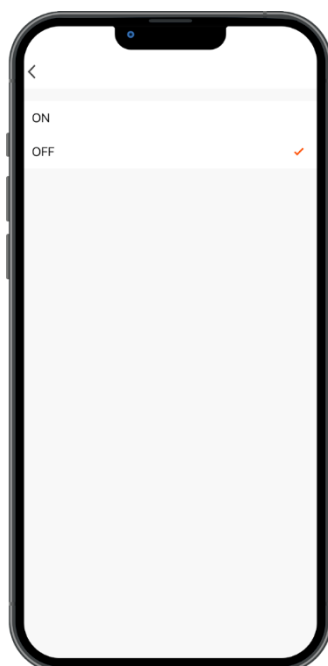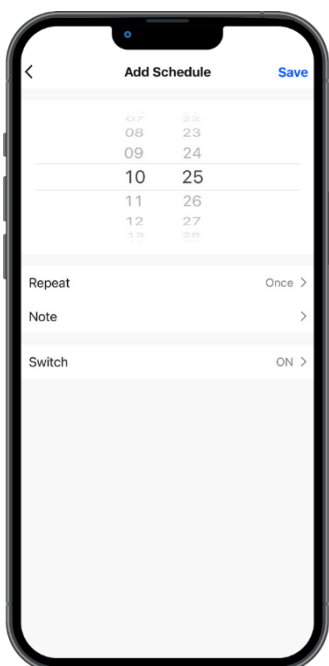

Press Add button to show timings and days of the week.

Select the time you want the heater to turn off, press Switch and select off. Press Done followed by Save.

 
 
The dark grey screens are not required by IOS users.

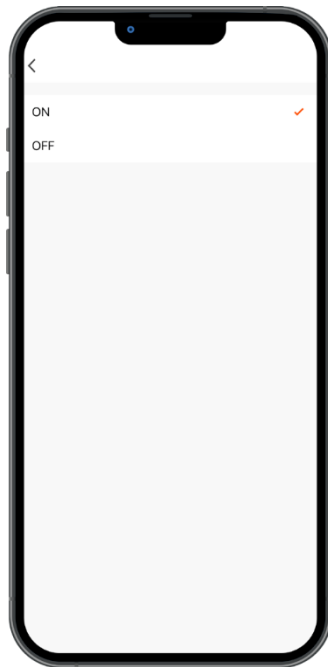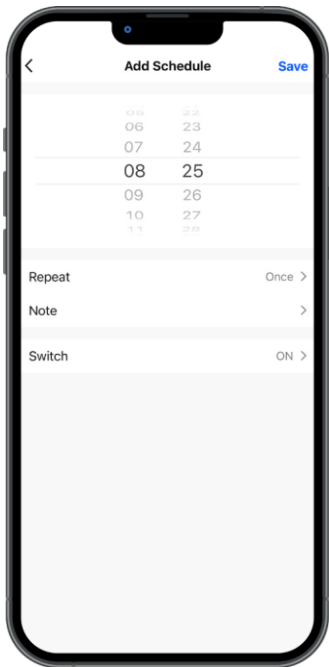

## WEEKLY SCHEDULE

To turn the heater on for specific time(s) and date(s), select the time you want the heater to start using the above screen. Press switch.

 
 
Press ON followed by Done.

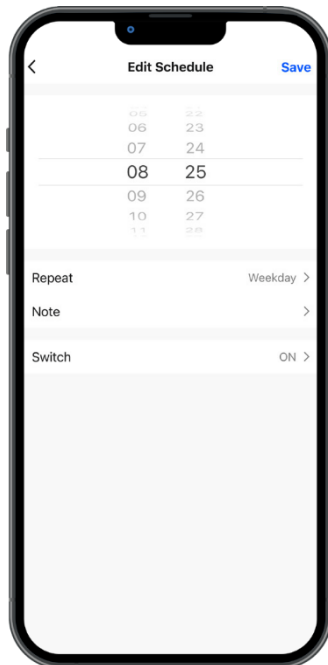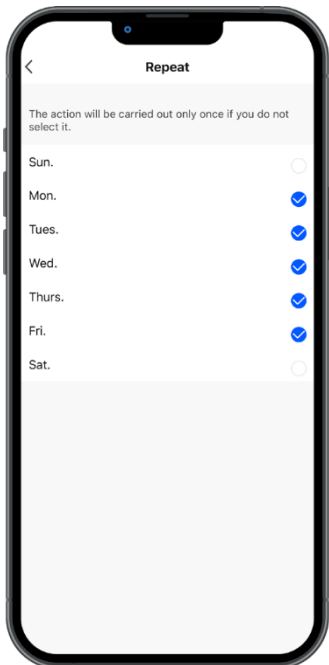

Press the repeat button to show the list of days.



Tick the day(s) of the week you want the start time to be used. Press the < on top left hand of the screen.

  Press Save to save your time and date(s) for the heater to turn on. To receive a notification to your phone to alert when the schedule has activated, before saving press notification.

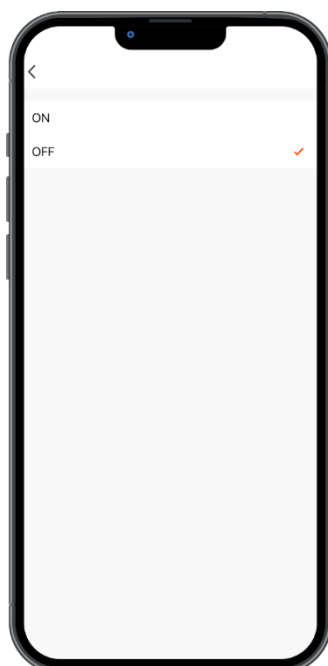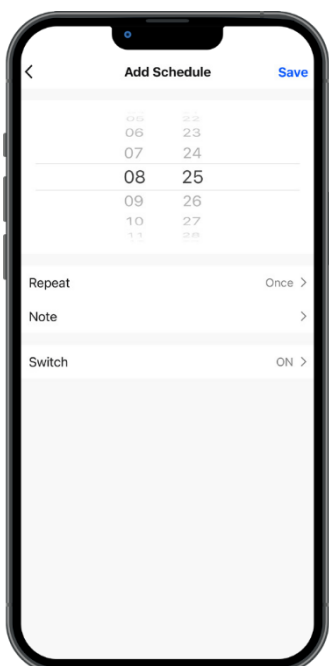

To turn the heater off for specific time(s) and date(s), select the time you want the heater to stop using the above screen. Press switch.

  Press OFF followed by Done.

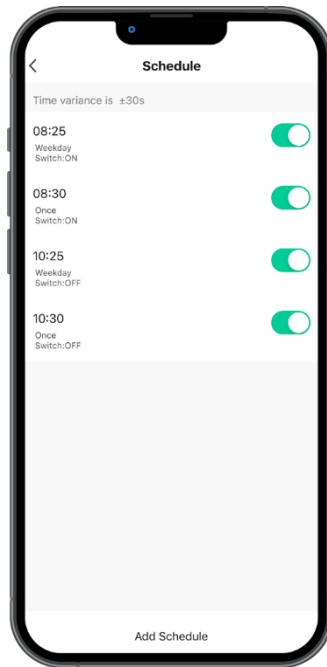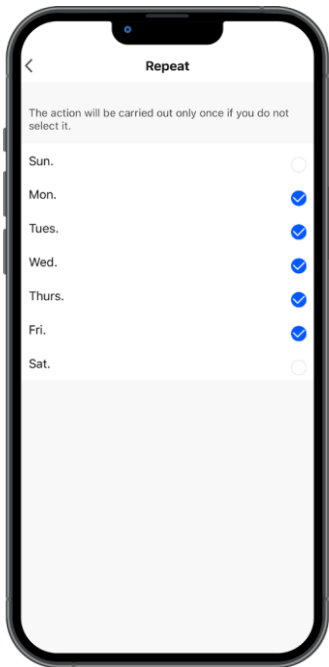

Press the repeat button to show the list of days.

Select the day(s) of the week you want the end time to be used. Press the < on top left hand of the screen.

Press Save to save your time and date(s) for the heater to turn off. The process for scheduling can be done as many times as you need.